



falezçelikkapi®


Steel Casing Frame Assembly Description



INSTALLATION FUNCTIONS

Door overturning, safety against dropping and scratching
Once you are sure you have received the package carefully open the door.





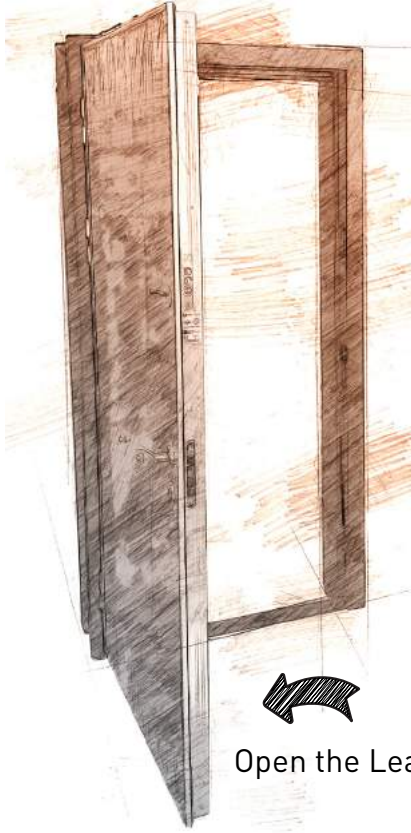

Open the Leaf



Leaf up
by raising
Disconnect

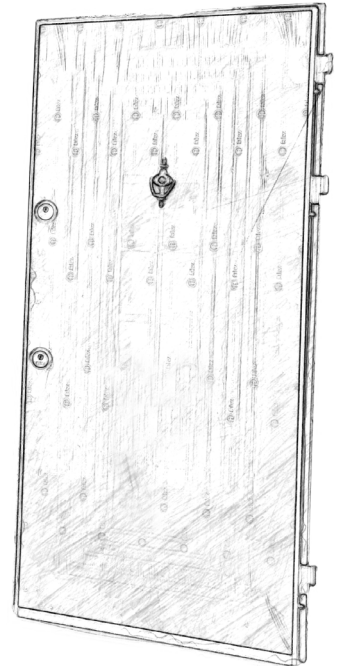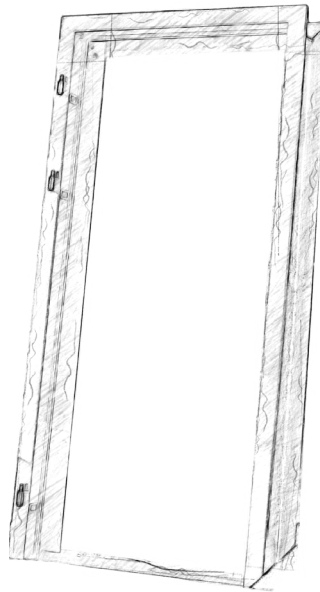


The wing and the case are separated from each other.

PREPARING BODY INSTALLATION


The case, separated by a Leaf, has two parts in itself.

These two parts are referred to as the front joint and the case, and they reach you with screws.

Now separate the front pass and the cabinet by accessing the screw through the screw mounting holes.

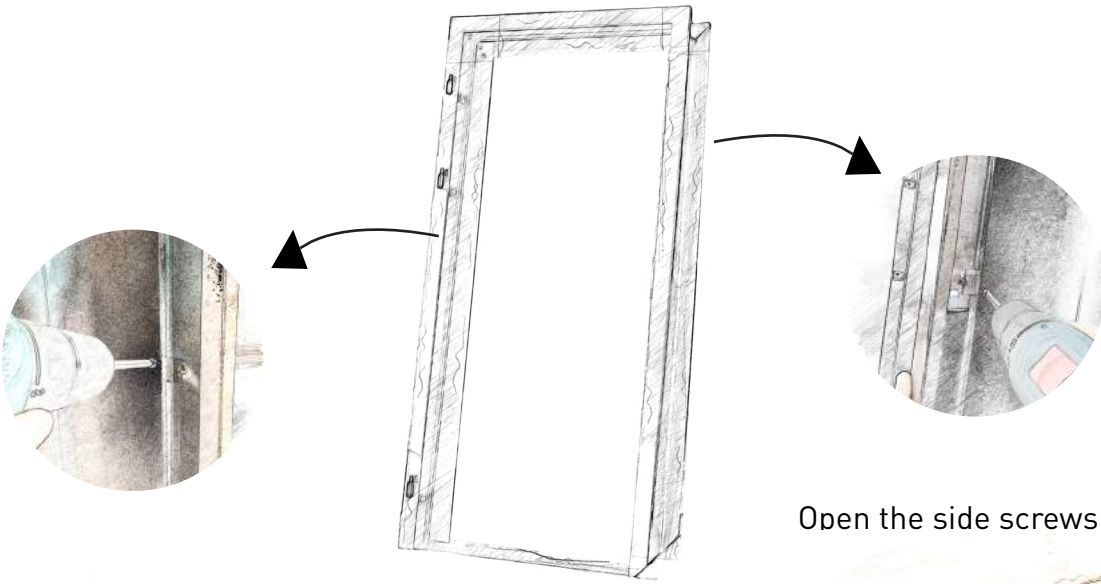

Open the side screws

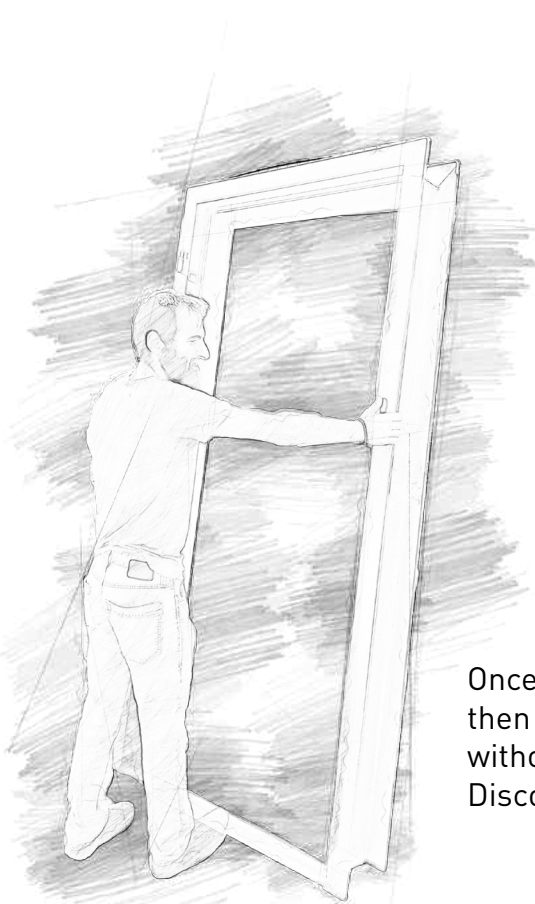

Once you have removed all of the screws then go ahead and hold yourself without pulling back Disconnect.





FRAME ASSEMBLY

Frme



Wall Space



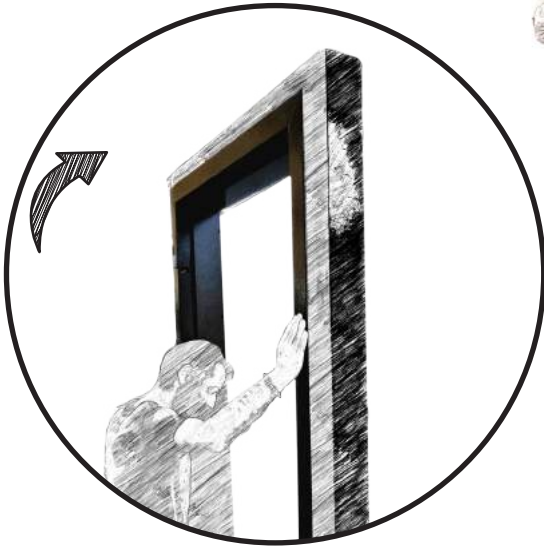
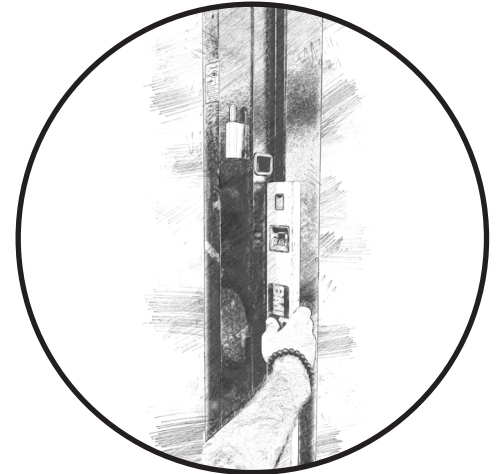



Safe box
sit in the empty space




Scale horizontally and vertically
use wedge to balance if necessary

Install front part check horizontal and vertical level

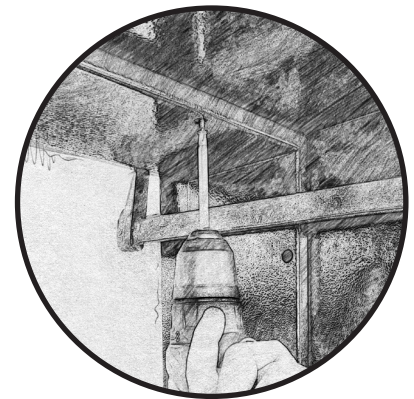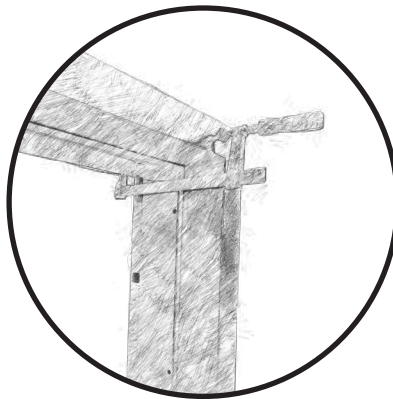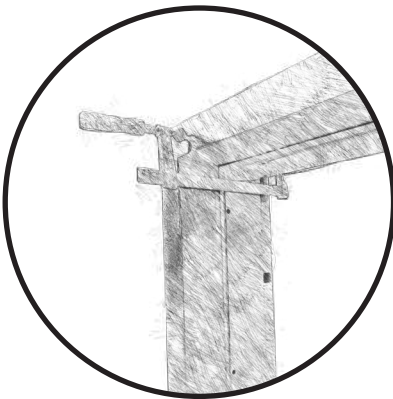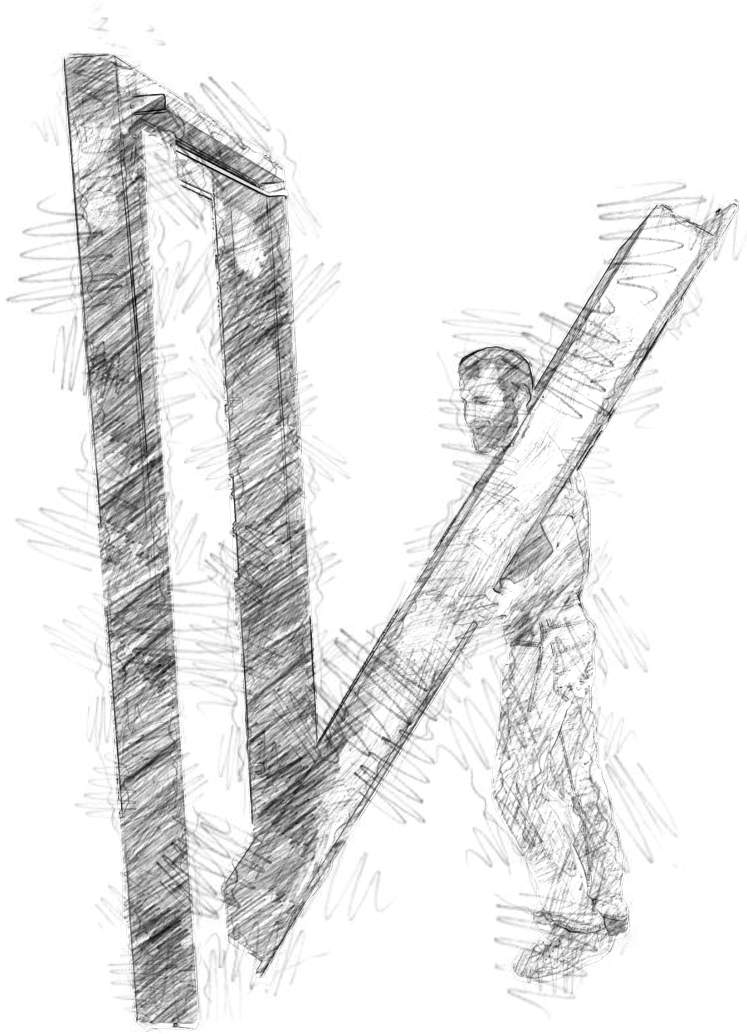

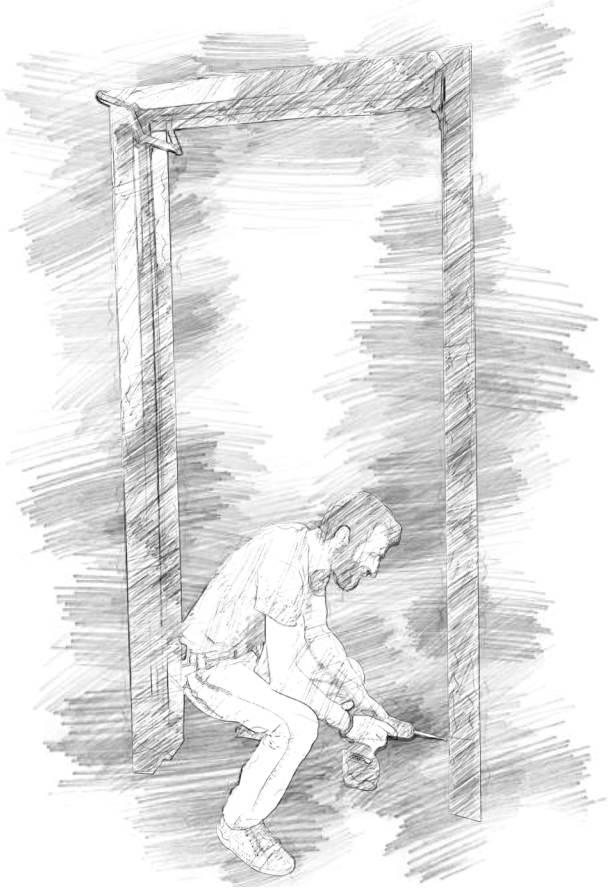

All screws that connect the chassis and the passenger make sure it is plugged in

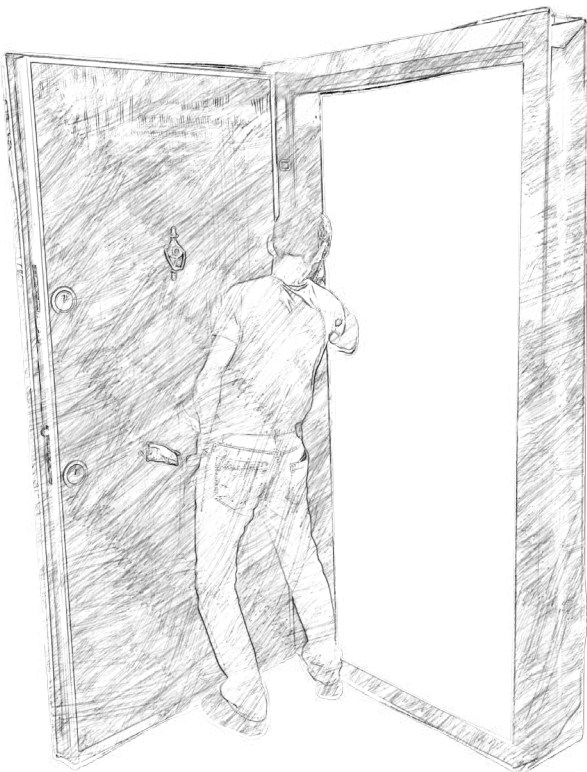


Attach the wing to the Kas all the hinges be sure to part



Make the hinge adjustments. Hinges You can adjust the two axes with the allen key back and forth and up and down.

All hinge adjustments and scales are prepared on the inside of the wall with the door frame after finishing pour the concrete syrup and make sure that the clamping apparatus is in place. and then sit on the doorstep with it.

* Foam may also be preferred as fixation in practice, in which case all mounting steps frost-proofing.

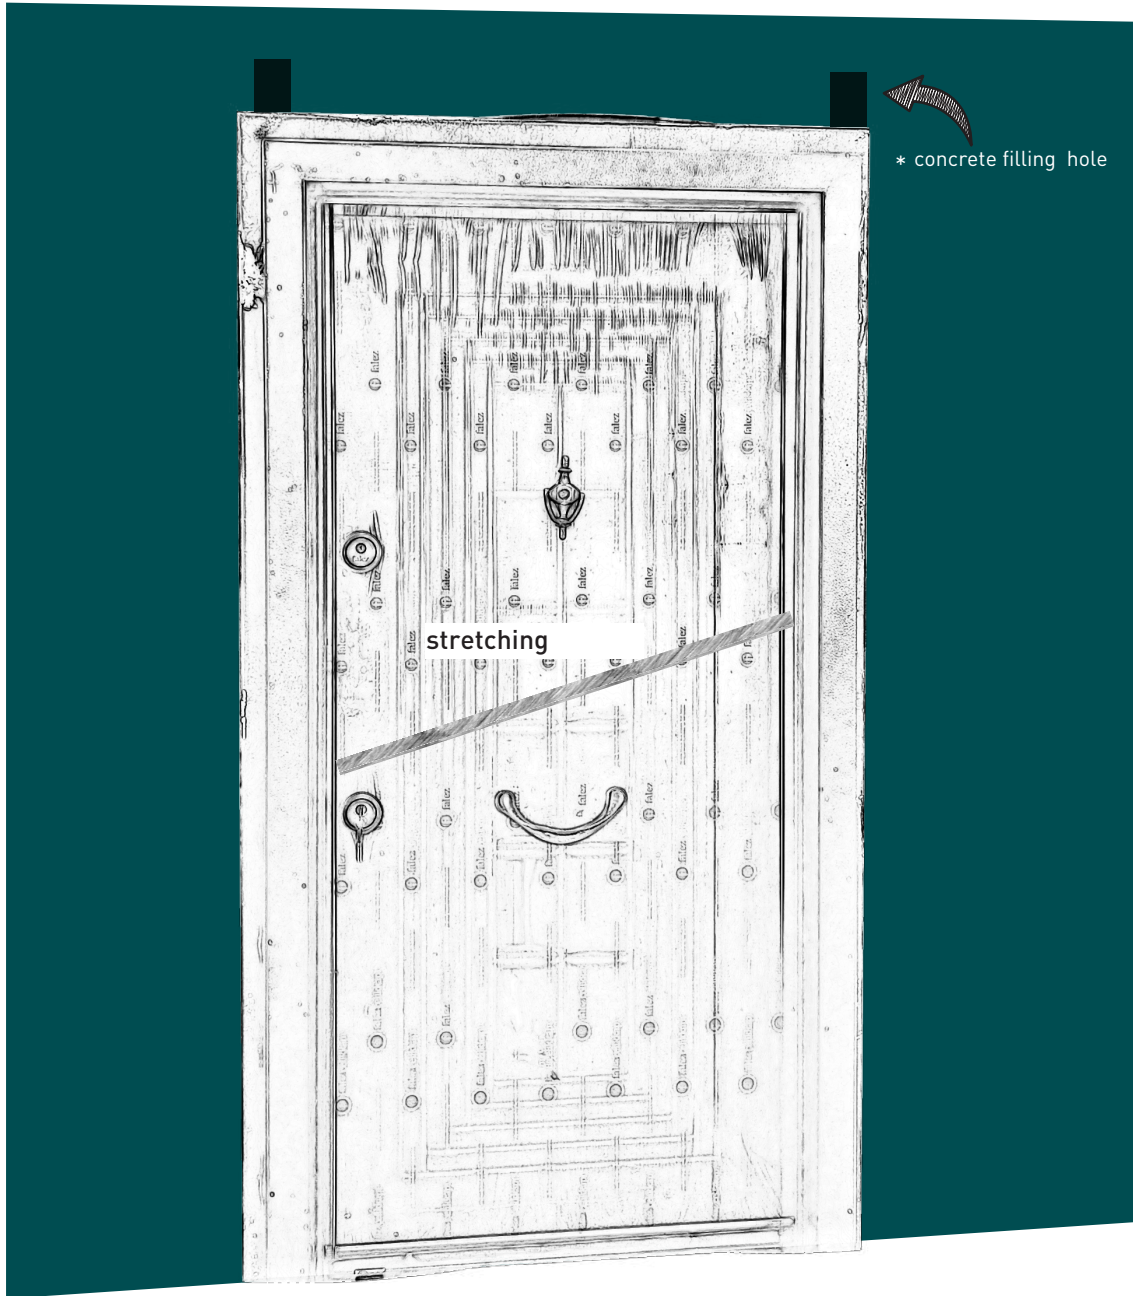

Inform users of maintenance, cleaning and use. Protection gels on the covers
These gelatins should be removed at the end of the installation.
it must be removed immediately after installation.

BAKIRCILAR ÇELİK KAPI

Alü.Mob.Mad.Mer.İnş.Tic ve San.Ltd.Şti

Genel Müdürlük & Fabrika / Head Office & Factory

Odabaşı Mh.9681 SkNo:11 Kepez / ANTALYA

T: + 90.242.424 83 27-28 pbx F: + 90.242.424 83 29

Info@falezcelikkapi.com

www.falezcelikkapi.com

www.falezcelikkapi.com

444 1 694